

Quick Tips

PROGRAMMING YOUR AIR LINK TV PREPAID REMOTE CONTROL



LED

1

Press and Hold
“SETUP” & “B” together
until LED Blinks TWICE.

2

Press and Hold
“SETUP” until
LED Blinks TWICE.

3

Press and Hold
“Volume -” until
LED Blinks four times.